

take




ten




How-To Make
a Headrest



We love this idea! Spring is FINALLY here and summer is around the corner; so we have turned our focus to outdoor soft goods. This is an easy upsell using $\frac{1}{2}$ yard of outdoor fabric. They are not only great for Adirondack chairs, but what about in terry for those pool chairs? Or add pockets for your suntan lotion and cell phone at the beach. Have some leftover trimmings? Add a button or fringe as a finishing touch.

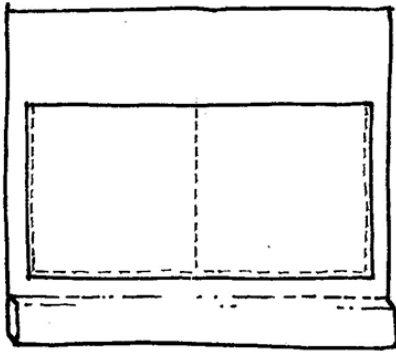

ADD A DOUBLE POCKET TO THE BACK OF THE BOTTOM PANEL AND YOU CAN STORE SUNSRENN, SUNGLASSES, OR WHATEVER YOU NEED AT HAND.

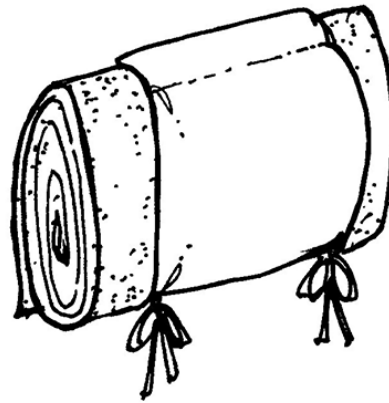

SEW TIES AT THE FOUR OUTER CORNERS AND REMOVE THE WOOD WEIGHT AND YOU HAVE A HANDY TOWEL HOLDER AND BEACH PILLOW READY TO GO.



INSTRUCTIONS

1. Cut one front and one back section.
2. Place sections together face to face.
3. Stitch across top edge - A
4. Stich down both sides - C leaving bottom edge B open.
5. Clip the two top corners and turn the pillow pocket right side out.
6. Press seams open.
7. At point D on both sides top stitch about 2 to 3 inches in from the edge leaving an opening wide enough to insert pillow form or stuffing.
8. Insert pillow form or stuffing and top stitch the opening closed.
9. Fold the bottom edge-B up over the face of the fabric to form a sleeve -E for the 1" X 2" wood weight.
10. Double fold a small hem at the raw edge and topstitch in place.
11. Insert the wood weight in the sleeve.
12. Place velcro dots at the openings of the sleeve to secure the weight.


REVERSIBLE PATIO / LOUNGE CHAIR HEAD CUSHION

BLACK LINES - CUT

RED LINES - STITCHING GUIDE

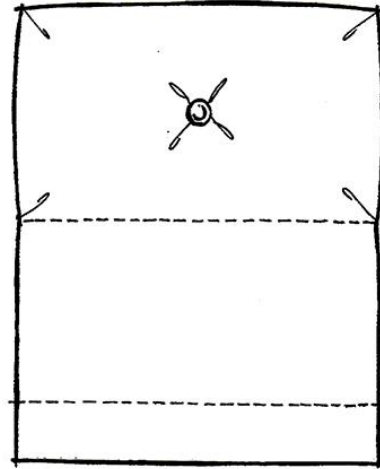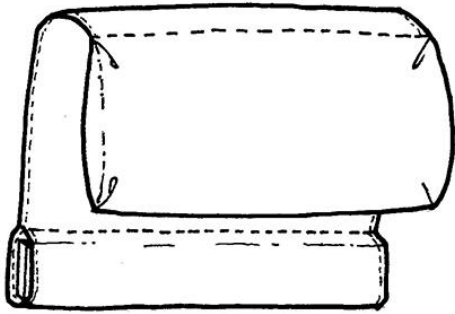

FRONT
CUT ONE
A

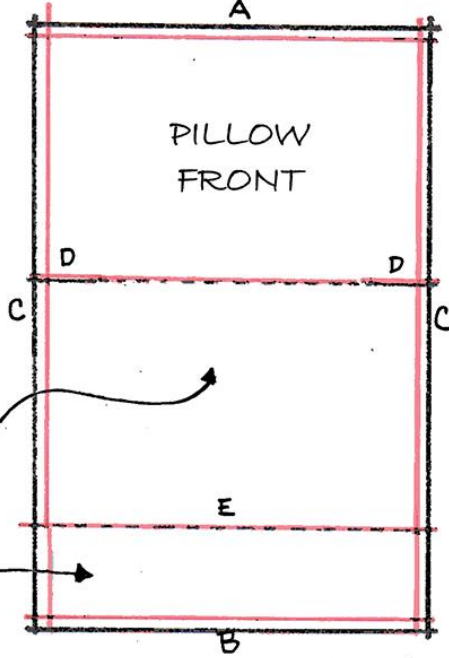


PILLOW
FRONT

THIS SECTION
HANGS OVER
THE BACK OF
THE CHAIR

INSERT A SECTION OF 1" X 2" WOOD
MOLDING CUT TO A LENGTH 1 INCH
SHORT OF THE POCKET INTO THIS
POCKET TO WEIGHT THE HEAD
REST IN PLACE.

BACK
CUT ONE
A

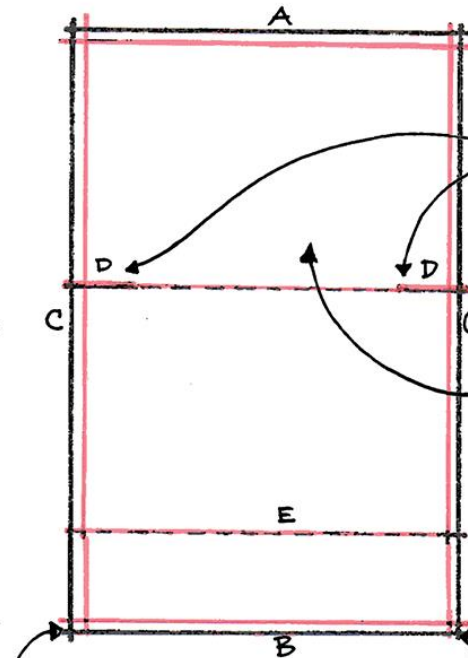

SEW ALONG THIS
STITCHING LINE 2 OR 3
INCHES IN FROM THE
EDGE LEAVING AN
OPENING IN THE
CENTER

INSERT PILLOW FORM
OR STUFFING HERE
THEN STITCH CLOSED.

DOUBLE FOLD THE EDGE OF THE PANEL
AND THEN FOLD THE BOTTOM SECTION
OF THE PANEL UP TO CREATE A POCKET
FOR THE WOOD WEIGHT.